

## Flash-Link USB

Thank you for purchasing our Flash-Link USB interface cable. Please read the instructions below thoroughly to ensure successful installation and operation of this product. Should you require any assistance please contact our technical support team via our website.

### **Installation:**

Ensure that you have downloaded and installed the USB drivers before plugging this cable to your computer for the first time. The drivers are located on our website [www.spartan-rc.com](http://www.spartan-rc.com) on the Flash-Link's page.

### **Operation:**

Additionally to the drivers you will also need to download the firmware loader and/or configuration programs for your Spartan RC product. The latest versions of these can be found on each product's web page.

### **Overview**

Many Spartan products benefit from computer connectivity capabilities for the purpose of modifying their configuration parameters or updating their firmware when improvements are made. To take advantage of these features an optional Flash-Link or Blue-Link interface module is required offering USB or Bluetooth connectivity respectively. In addition to computer connectivity the Bluetooth option can be used with certain PDAs and mobile phones providing a convenient way for editing configuration parameters at the field. Not all of our products support these options; specific information can be found on each product's own web page.

### **Flash-Link Requirements**

USB1.x or USB2.0 enabled PC running Windows XP or Vista operating system.